


R4

INTERMEDIATE BEARING

12/12 maximum slope

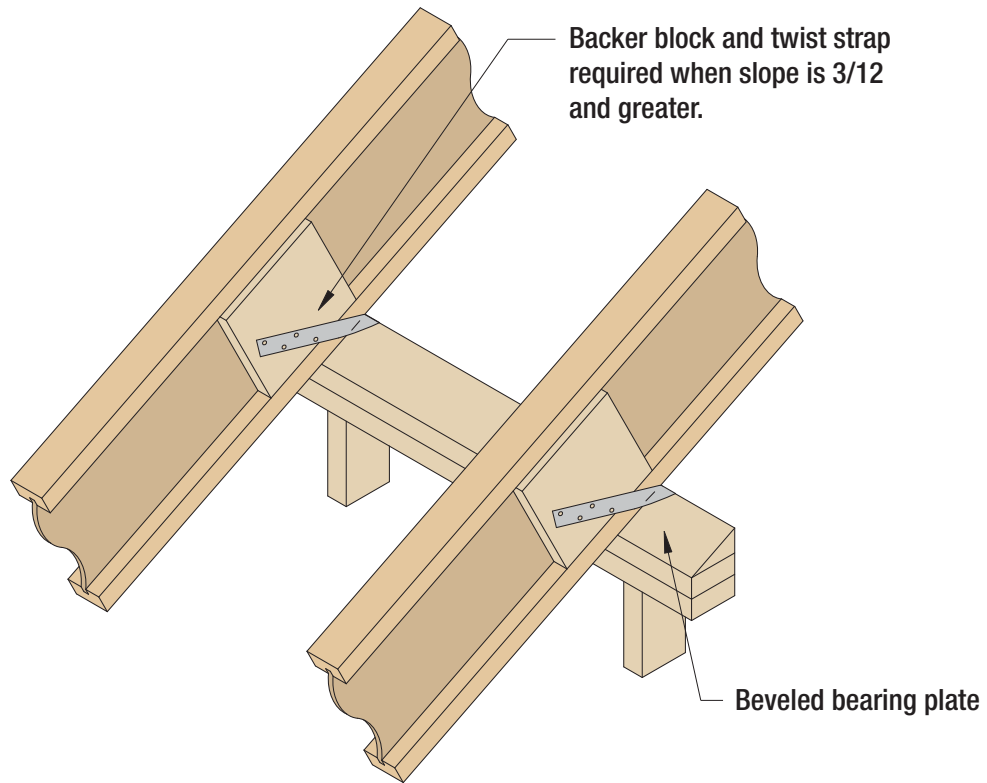

Attach to bearing plate per detail F1. Additional uplift connections may be required.