


C5 CANTILEVER, DROPPED

X-bridging or BLI joist blocking panels (see detail F2) required at cantilevers.

Load bearing wall not allowed

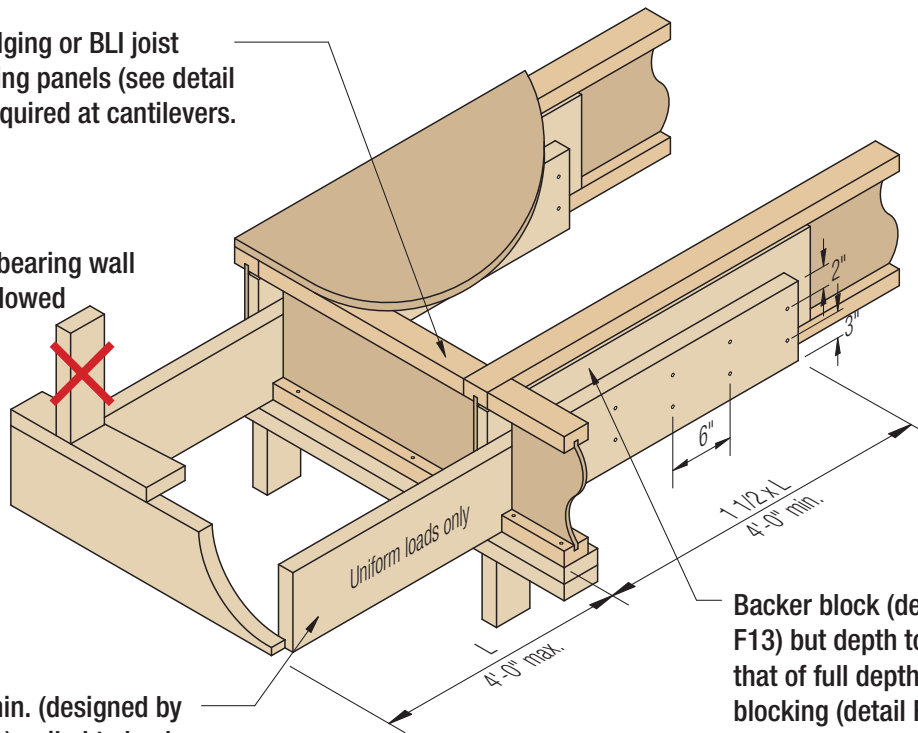

2x8 min. (designed by others) nailed to backer block & web with 2 rows of 10d nails at 6" o.c.

Backer block (detail F13) but depth to match that of full depth filler blocking (detail F11). Install backer tight to bottom flange. Nail with 2 rows of 10d nails at 6" o.c. and clinch.