


**F1 ATTACHMENT AT END BEARING**

One 10d box or sinker nail each side at bearing, typical for all wood bearings.

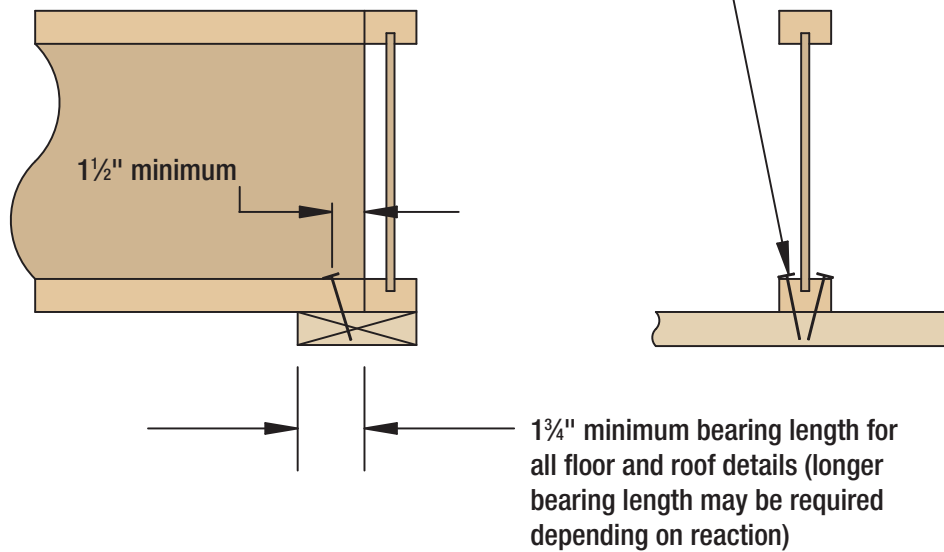

To minimize splitting of flange and bearing plate, angle nails and start at least 1 1/2" from end.