


R6

BIRDSMOUTH CUT

Low end of joist only. 12/12 maximum slope

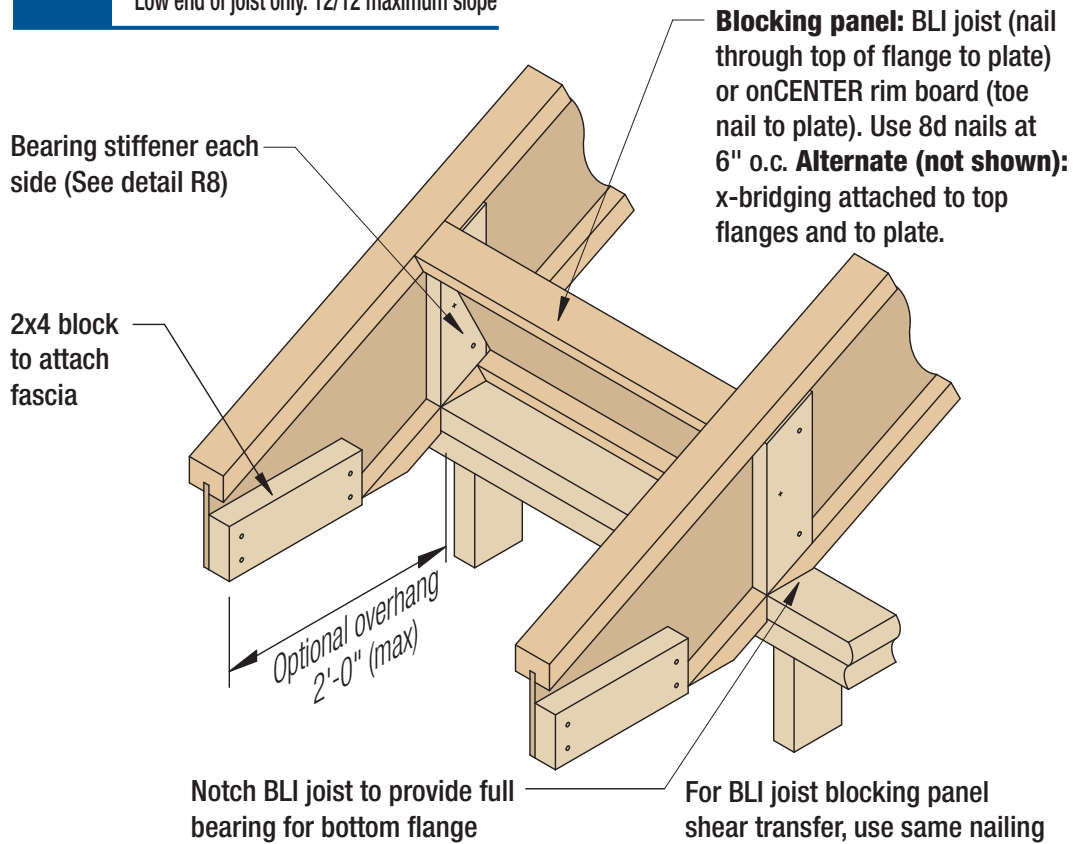

Attach to bearing plate per detail F1.
Additional uplift connections may be required.

For BLI joist blocking panel shear transfer, use same nailing as required for sheathing, but complying with Installation Note 5, page 31 of OCPG. For rim board shear transfer, see APA EWS Y250.